

How to Open and close the roof



Before opening or lowering the roof you must always have a window or door fully open.

HOW TO RAISE THE ROOF

1

Press clasp lever and pull the strap through the buckle leaving about 6 inches of strapping in the clasp.



2

Place both hands on the underside of roof at front and push upwards until fully open.



3

Remove the inner folding elastic by un-hooking and stow away somewhere safe.



4

Push up bed with hands, on the under-side of the bed at the front (roof and bed are now raised). Bed may now be pushed up or pulled down at any time for use.

OPENING THE SCENIC CANVAS FEATURE

1

Press the clasp levers and pull both straps all the way through the buckles so they hang loose.



2

Unzip the scenic opening feature of the canvas until the canvas is fully open.



3

The canvas is secured using 4 press-studs, there are two press-studs which are located low down on the front panel, these two are located either side of plastic window. When viewed from the front of the vehicle. These are known as 'front panel studs'.

The other two press-studs (1 each side) are located towards the front of the canvas low down on the material flap

which covers the scenic feature zip.
These are known as 'side panel studs'.

On the underside of the roof, there are two pairs of press-stud receptors, the pairs are in line with an inner stud and an outer stud.

To secure the canvas, lift the front edge of the canvas and using the press-studs on the canvas secure each one to the receptors fastened to the underside of the roof .



Note position of 'front panel stud' and 'side panel stud'.



The left stud is the 'outer' stud and the right stud is the 'inner' stud

To enable the canvas to fold correctly so that it can be held up against the roof it's important that the studs are secured in a specific manner.

2. The two 'side panel studs' must be secured first; these press-studs are secured to the outer stud receptors.
1. The 'front panel studs' can now be secured to the inner studs.



CLOSING THE SCENIC CANVAS FEATURE

1

Release the press-studs so that the canvas hangs loose

2



Feed the straps through the buckles and pull both straps down so that the roof is pulled down, 6" is sufficient.

3



Fully close the scenic opening using the zip fasteners which run horizontally around the roof.

HOW TO LOWER THE ROOF

1



Pull the bed down fully if elevated and ensure that it is in the closed position.

2



Re-attached the elastic strap, this can be done by standing on the front seats and leaning into the bed space.

3



Hold both loose straps and slowly pull the roof down in increments of about 4 inches (100mm).

Please ensure throughout the closure process that the canvas material is not in contact with the hinges.

Please ensure that the canvas folds inwards.

4




Continue to lower the roof whilst slowly pulling down the straps in increments of about 4 inches (100mm)

Please ensure that the front window is folded neatly to avoid being creased.

Please ensure throughout the closure process that the canvas material is not in contact with the hinges.

5

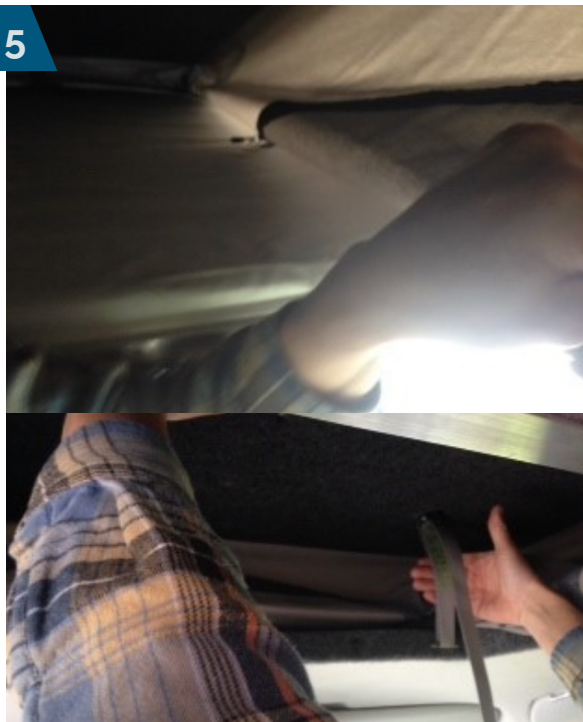

Continue to lower the roof whilst slowly pulling down the straps in increments of about 4 inches (100mm) until the roof is fully closed.

Carefully check that the canvas has not been trapped by the hinges.

Carefully check that the straps are free and have not been caught by the front of the roof.

Carefully check that the front window is folded neatly and sits behind the straps and is not trapped under the edge of the roof.

6



When the roof is fully lowered, step out of the vehicle and check that the canvas is not visible at any point from the outside.

If the canvas is visible, you will need to raise the roof to a position to allow the canvas to be folded and stowed within the roof space.

If satisfied that none of the canvas is trapped beneath the edge of the elevating roof, step back into the vehicle to make the final step.

7

Pull the straps tight but do not over-tighten, step out of the vehicle and check that the rubber seal around the perimeter of the roof is compressed leaving no gaps. If a gap is found the straps must be pulled tighter to compress the rubber seal.

8

When you're satisfied that the roof is closed properly and secure, the straps can be rolled or folded and then stowed.